




PRODUCT INSTALLATION GUIDE



PRODUCT:	<i>RIGHT HAND REAR DOOR - MOLLE PLATE</i>
VEHICLE:	<i>TOYOTA LANCRUISER - 78 SERIES</i>
PRODUCT NO.	OTA-78-2022-003

TOOLS/ITEMS REQUIRED FOR FITTING:

- HANDHELD DRILL
- 3mm DRILL BIT
- RIVET GUN
- MARKER PEN (FINE POINT)
- RUST PROOF PAINT
- SMALL PAINT BRUSH
- 10mm SOCKET
- SOCKET WRENCH

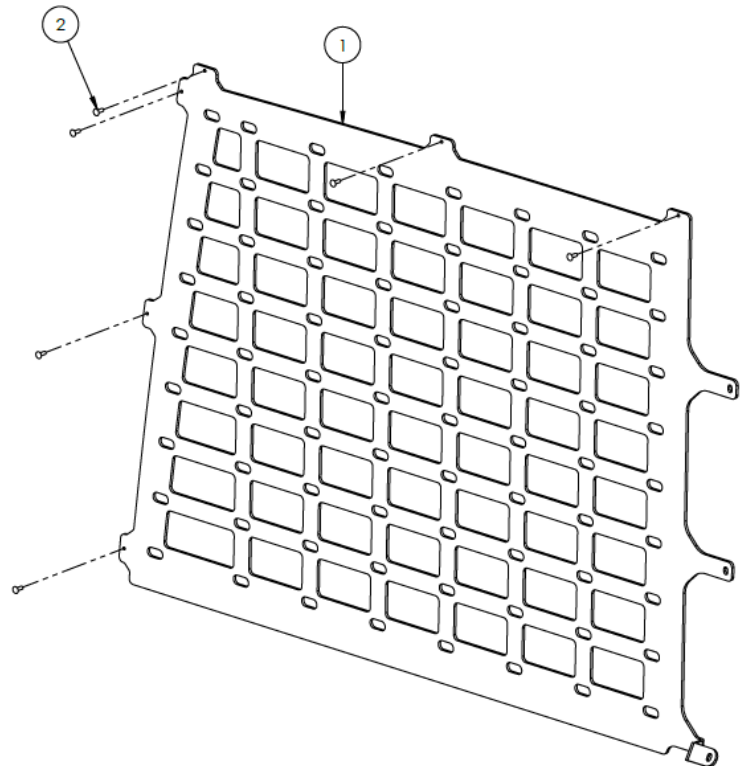

ITEM NO.	DESCRIPTION	QTY	PART NUMBER
PART LIST			
1	RIGHT HAND REAR DOOR - MOLLE PLATE	1	OTA78-2022-003

FITTING KIT - SUPPLIED			
ITEM NO.	DESCRIPTION	QTY	PART NUMBER
2	3mm BLACK BLIND RIVETS	6	-

FOR PRODUCT WARRANTY PLEASE REFER TO OUR WEBSITE - www.micktighe4x4.com.au/


OVERLAND TOURERS AUSTRALIA

STEP 01:

PREPARE AND CLEAN MOUNTING SURFACE ON LEFT HAND WINDOW.

STEP 02:

- USING A 10mm SOCKET AND SOCKET WRENCH, REMOVE THE THREE EXISTING SCREWS FROM THE PLASTIC MOULDING ON RIGHT HAND SIDE.

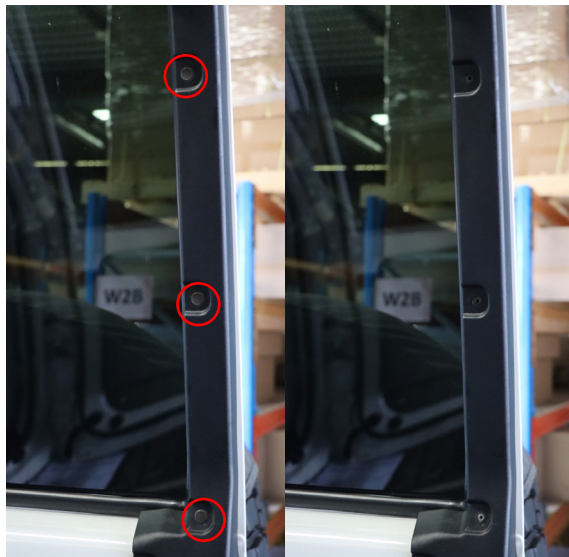


STEP 03:

- ALIGN THE RIGHT SIDE OF THE MOLLE PLATE TO THE SCREW HOLES AND INSERT REMOVED SCREWS.



STEP 04:

- NOW THAT THE MOLLE PLATE IS SECURED, ALIGN THE SIX HOLES CENTRAL TO THE WINDOW TRIM AND SCREW HOLES.

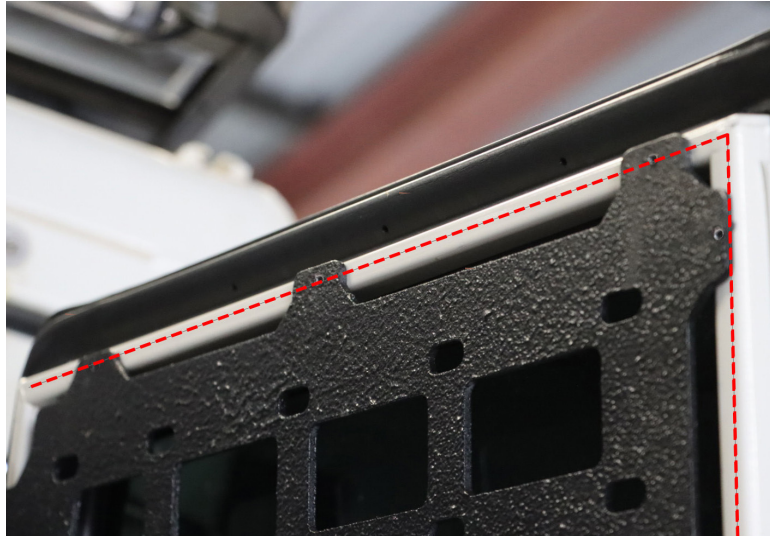

STEP 05:

- ONCE ALIGNED, USE A FINE POINT MARKER TO MARK THE SIX HOLE CENTERS AND REMOVE THE SCREWS AND MOLLE PLATE.



STEP 06:

- USING A 3mm DRILL BIT, DRILL ALL THE MARKED HOLES.



STEP 07:

- USING A SMALL PAINT BRUSH, PAINT RUST PROOFING ON ALL HOLES (ENSURE ALL BARE METAL IS PAINTED).
- ALLOW TO DRY AND RECOAT



STEP 08:

BEFORE MOUNTING THE MOLLE PLATE, ENSURE BOTH THE INSIDE OF THE WINDOW AND MOUNTING FACE ARE CLEAN.

STEP 09:

REALIGN MOLLE PLATE TO SCREW HOLES AND FIX MOLLE PLATE IN PLACE.



STEP 10:

USING A RIVET GUN, RIVET MOLLE PLATE ONTO WINDOW USING HOLES DRILLED IN STEP 06 AND THE SIX SUPPLIED BLACK RIVETS.



STEP 11:

YOUR MOLLE PLATE IS NOW INSTALLED AND READY FOR YOUR NEXT ADEVNTURE!

